

BONT Prostar Suede Tracer Bpm Abec 5





The thermoplastic in the heel allows you to mold your boot with a hairdryer to obtain a custom fit in under 10 minutes!

Rating: Not Rated Yet

Price

Base price with tax \$399.00

Price with discount \$399.00

Salesprice with discount

Sales price \$399.00

Sales price without tax \$399.00

Save:

Tax amount

[Ask a question about this product](#)

Description

BONT Prostar Suede Tracer Bpm Abec 5


A skate designed to be light, responsive and heat moldable! A skate designed for you. The thermoplastic in the heel allows you to mold your boot with a hairdryer to obtain a custom fit in under 10 minutes. This is especially good for skaters with skinny or wide ankles. The boot is made with suede and features replaceable rubber bumper toe protection, an adjustable velcro top strap, and rear heel loop to put your laces through. The aluminum Tracer plate has a 20-degree action. The package will come with BPM 78A wheels made with premium high rebounding urethane, rounds out the super-light Prostar package.

Features:

- **Base:** Fiberglass
- **Outer skin:** Suede
- **Liner:** Microfiber
- **Boot height:** High
- **Heel rise:** 6mm
- **Innersole:** EVA with fabric
- **Heat moldable:** Fully heat moldable base utilizing epoxy thermoset resin allows you to mold your boot with a hairdryer to obtain a custom fit in under 10 minutes. Do not put in the oven to heat mold.
- **Padding:** Memory foam
- **Size options:** 35-46 for black-blue 35-39 for other colors
- **Fit options:** Standard
- **BPM wheels**
- **ABEC 5 bearings**

BONT Boot Sizing

It's critical to get this part right prior to ordering! This size chart shows the exact size of the foot form or 'last' that is used to create each specific size of BONT boots. As a basic rule, most skaters like their boots to be 3-4mm longer than the last. This allows for your feet to grow in length when the boots are tightened. If you like your boots super tight, then just add 1-2mm but be warned, your toes will touch the end and possibly be scrunched. To find your size, place a tape measure on a flat surface up against a wall. Stand on the tape measure with your heel against the wall. If you use a ruler, take into consideration that most rulers have a gap where there are no measurements. Look down and take the measurement from your longest toe. Then use the MM scale on the size chart to find your size...

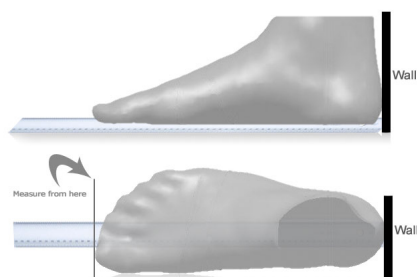

Bont Size	1	2	2.5	3	3.5	4	4.5	5	5.5	6	6.5	7	7.5	8	8.5	9	9.5	10	10.5	11	11.5	12	12.5	13	13.5
Euro Size	33	34	34.5	35	35.5	36	36.5	37	37.5	38	38.5	39	40	41	41.5	42	43	44	45	46	47	48	49	50	51
Length (mm)	211	219	223	228	232	236	241	245	250	254	259	263	268	272	276	281	285	290	294	299	303	308	312	317	321
Standard Width (mm)	78-87	81-90	82-91	84-93	85-94	86-96	87-97	89-98	90-100	91-101	92-103	94-104	95-105	96-107	97-108	99-110	100-111	101-112	102-114	104-115	105-117	106-118	107-119	109-121	110-122

Here are some examples of mm sizes and the boot size that BONT recommends:

253mm + 4mm you should order size 6.5

258mm + 4mm you should order size 7

273mm + 4mm you should order size 9

291mm + 4mm you should order size 11

Ready to Order your New BONTs?

If you are confident you have selected the right BONT size for yourself, by this measuring method or maybe you have had BONT boots before or tried a friends on, or tried actual BONT sizing stock somewhere in person (available by appointment at RollerSkatin.ca) then you are all set to order your BONT boot or skate! if you want to doublecheck everything with us to make sure you order the right size please send an email to:

CustomerService@RollerSkatin.ca

Reviews

There are yet no reviews for this product.